



Ex.No.8 - Object Detection using YOLO

Name: M MATHAN KUMAR

RollNo.:230701181


```
In [12]: import torch
import cv2 as cv
from ultralytics import YOLO
from IPython.display import display
from PIL import Image

print("YOLO installed successfully")
```

YOLO installed successfully

```
In [14]: model = YOLO("yolov8n.pt")
results = model("https://ultralytics.com/images/bus.jpg")
img = results[0].plot() # image with detections
img_rgb = cv.cvtColor(img, cv.COLOR_BGR2RGB)
display(Image.fromarray(img_rgb))
```

Found <https://ultralytics.com/images/bus.jpg> locally at bus.jpg
image 1/1 C:\Users\Monish\Image Processing and Computer Vision\Lab Experiments\
bus.jpg: 640x480 4 persons, 1 bus, 1 stop sign, 119.3ms
Speed: 12.8ms preprocess, 119.3ms inference, 0.7ms postprocess per image at shape (1, 3, 640, 480)

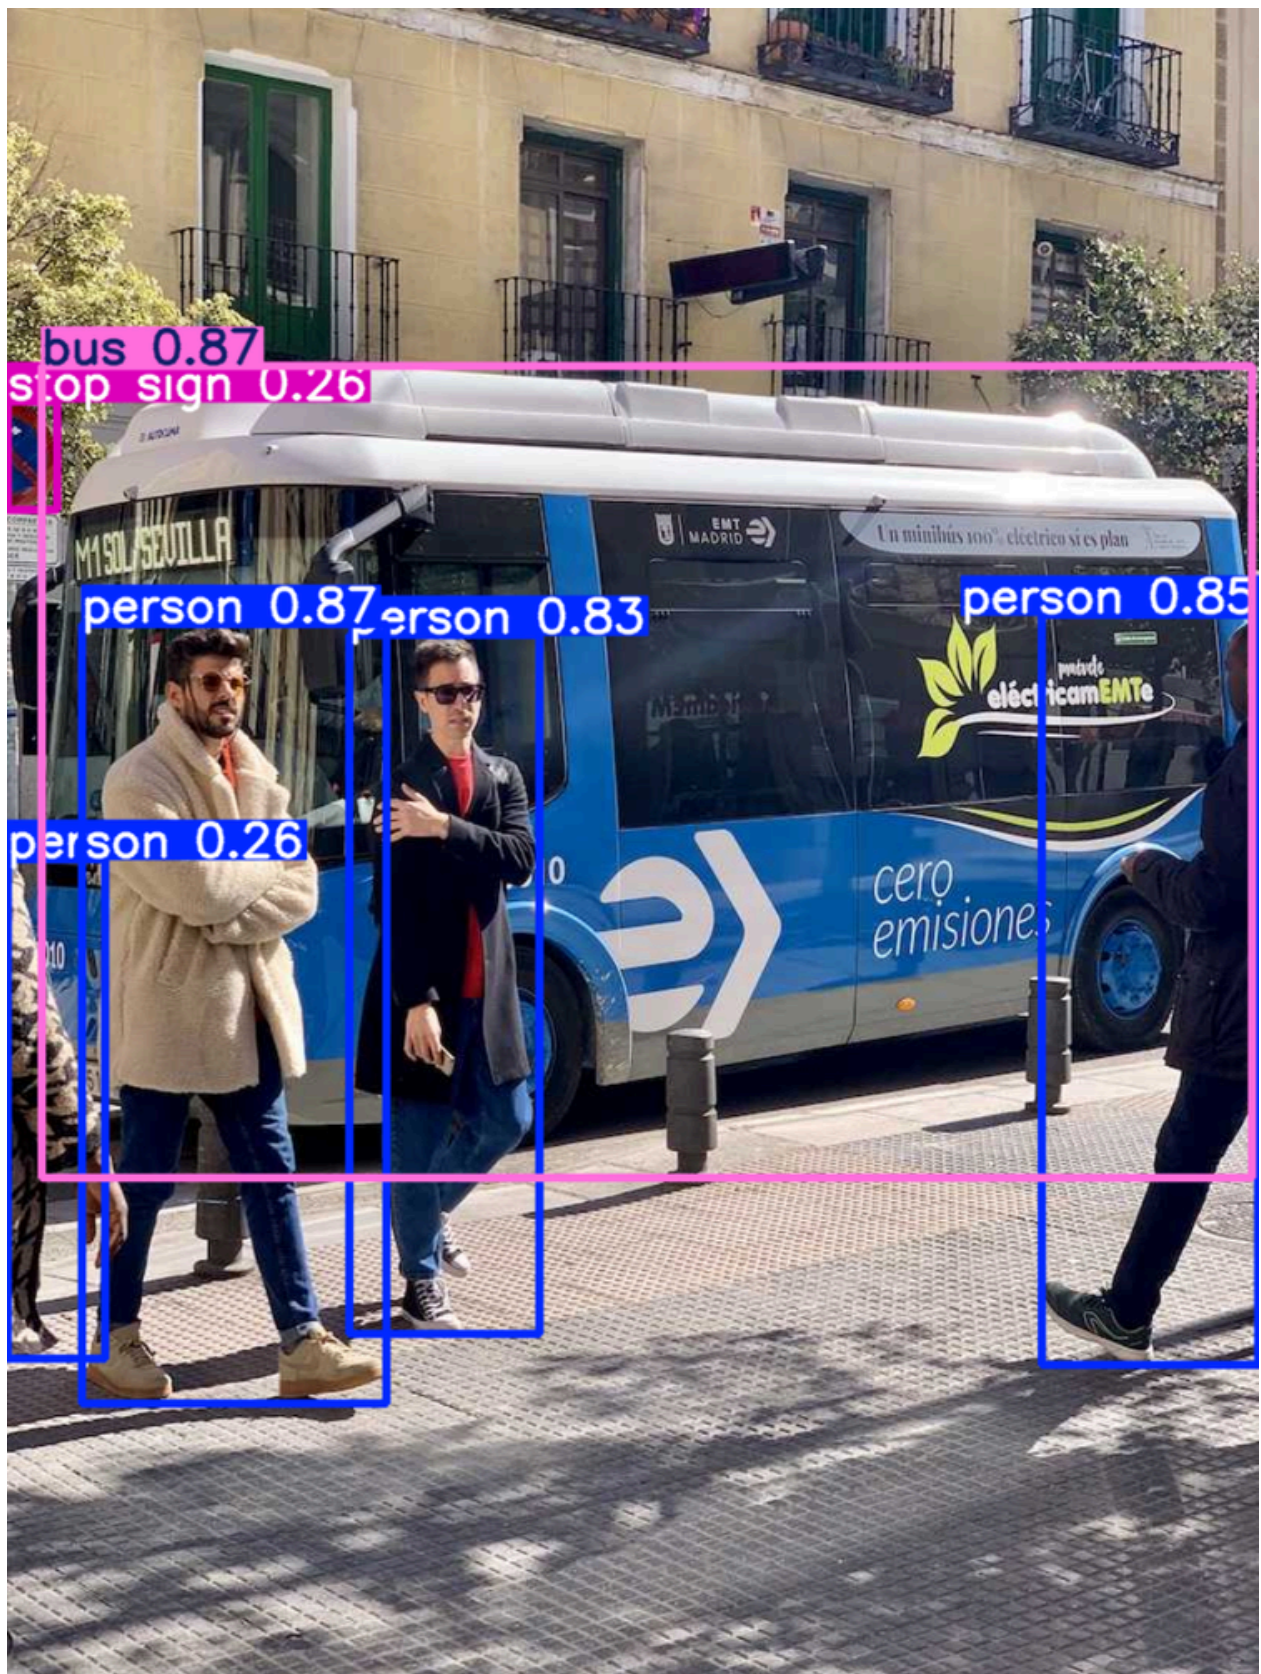

```
In [17]: # Giving our own input

results = model(r"D:\VIP & CV\Lab Experiments\Inputs\ManCar.jpg")
```

```
img = results[0].plot()      # image with detections
img_rgb = cv.cvtColor(img, cv.COLOR_BGR2RGB)
display(Image.fromarray(img_rgb))
```

image 1/1 D:\VIP & CV\Lab Experiments\Inputs\ManCar.jpg: 448x640 1 person, 1 car, 1 truck, 51.6ms
 Speed: 1.3ms preprocess, 51.6ms inference, 0.9ms postprocess per image at shape (1, 3, 448, 640)



Object Tracking

```
In [19]: import random
import os
from ultralytics import YOLO
from IPython.display import Video
```

```
In [22]: # Load YOLOv8 model
model = YOLO("yolov8s.pt")

# Use your saved video file
video_path = r"D:\VIP & CV\Lab Experiments\Inputs\Traffic Road.mp4"

cap = cv.VideoCapture(video_path)
```

```
In [23]: fps = int(cap.get(cv.CAP_PROP_FPS))
w = int(cap.get(cv.CAP_PROP_FRAME_WIDTH))
h = int(cap.get(cv.CAP_PROP_FRAME_HEIGHT))
```

```
# Video writer - saves in Downloads folder
out = cv.VideoWriter(
    r"D:\VI\IP & CV\Lab Experiments\Outputs\object_detection_output.mp4",
    cv.VideoWriter_fourcc(*'mp4v'),
    fps,
    (w, h)
)
```

In [24]:

```
def get_color(cls_id):
    random.seed(cls_id)
    return tuple(random.randint(0, 255) for _ in range(3))
```

```
# LIMIT: Process only first 100 frames
```

```
MAX_FRAME = 100
```

```
S = 0
```

```
frame_count
```

In [29]:

```
while True:
    ret, frame = cap.read()
    if not ret:
        break

    # Stop after MAX_FRAMES
    if frame_count >= MAX_FRAMES:
        print(f"\n✓ Reached limit of {MAX_FRAMES} frames. Stopping...")
        break

    # Detect objects
    results = model.track(frame, stream=True, verbose=False)

    for result in results:
        for box in result.bboxes:

            if box.conf[0] > 0.4:

                x1, y1, x2, y2 = map(int, box.xyxy[0])
                cls = int(box.cls[0])
                conf = float(box.conf[0])
                track_id = int(box.id[0]) if box.id is not None else 0

                # Draw bounding box
                color = get_color(cls)
                cv.rectangle(frame, (x1, y1), (x2, y2), color, 2)

                # Draw label
                label = f"{result.names[cls]} ID:{track_id} {conf:.2f}"

                cv.putText(
                    frame,
                    label,
                    (x1, y1 - 10),
                    cv.FONT_HERSHEY_SIMPLEX,
                    0.6,
```

```
        color,
        2
    )

    out.write(frame)

    frame_count += 1

    if frame_count % 10 == 0:
        print(f"Processed {frame_count}/{MAX_FRAMES} frames...")

    cap.release()
    out.release()

    print("✓ Done! Output saved")

    Video(r"D:\VIP & CV\Lab Experiments\Outputs\object_detection_output.mp4")
```

✓ Done! Output saved

Out[29]:Your browser does not support thevideoelement.

In []: